



THE CELEBRATION EXPERTS

www.pedersens.com

Handwashing Sink(Cart) Operating Instructions

1. Check that the clean water tanks are full (smaller tanks labelled clean water only) and waste tanks are empty (larger tanks). These tanks are located under the sink inside the doors.
2. Plug into a dedicated 15 amp power source. If an extension cord is required, do NOT use a cord longer than 25 feet and no lighter than a AWG 12/3 grounded cord. A lighter cord will not deliver enough power to heat the water and could damage the pump and heater unit.
3. If the water stops flowing then your water tank is probably empty.
 - a. The sink has 2 water tanks. Switch the hose to the full water tank.
 - b. At the same time you will need to remove the full waste water tank and move the drain spout into the empty waste water tank. This will remove the risk of sewage running onto the floor around the sink.
Dispose of sewage before you move the sink.
4. This sink is to be used for hand washing only. It is not to be used for washing pots, pans or dishes an additional \$100 cleaning fee will be charged.

This sink has been tested at our facility before you receive it. Do not tamper with the internal electric connections. They are preset properly. Use only the external electric cord.